

the control panel


Programme Selection Dial

Different programmes can be selected according to your requirements.

To set your Favourite programme, turn the dial to the desired programme, adjust the water temperature, spin speed and other function options, then press and hold **Speed** button until a beep is heard.

LED Display

- Show the delay time and error code.
- After the wash procedure begins, the display will show the wash remaining time, spin speed and other function options.
- When the child lock function is selected, the Child Lock indicator will be illuminated.
- When the door is at the lock state, the Door Lock indicator will be illuminated.

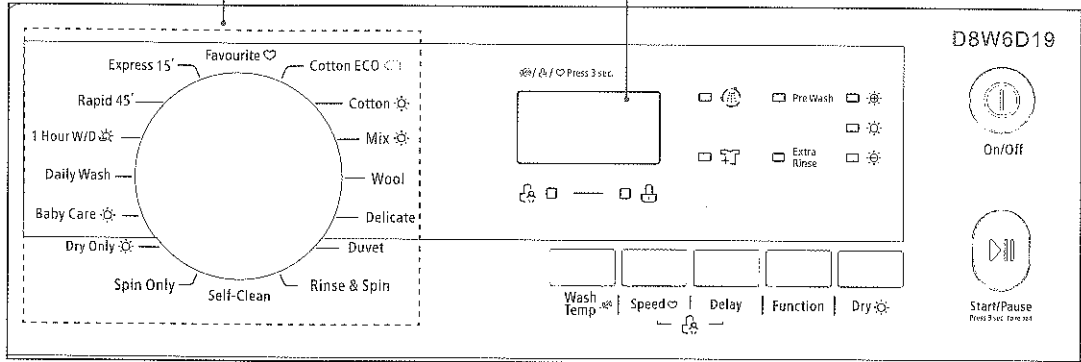

Button	Function
Wash Temp.	Press continuously to select the desired water temperature of the selected programme.
Speed	Press continuously to select the desired spin speed of the selected programme.
Delay	This button is used to delay start the wash. Press continuously to select the time you want to start the wash.
Function	Press continuously to select optional function.
Dry	Press continuously to select the desired drying level of the selected programme.
On/Off	Press to turn on/off the machine.
Start/Pause	Press to start your wash. Press while in operation to pause your wash.



- If you need to change a setting after the wash has started, switch the machine off. Switch on the machine. Re-select the programme, spin speed and optional functions, and then press the **Start / Pause** button. (Ensure the Child Lock is off, otherwise the original programme will continue.)
- Water is poured into the machine to perform an inspection at the time of shipment from the factory, so there may be drops of water or condensation in the machine. This is not an indication of a malfunction.



During initial start-up and use of the unit, there may be a slight smell while the motor is settling in. This is not a fault; this is normal operation.

GB

preparation

Read the following to understand how best to prepare your laundry for washing.

organising laundry


- Read the washing label on each garment to help you sort your washing into different loads.
- Sort the laundry by colour, type of fabric and by how soiled it is. This will help you choose the correct programme and temperature for each wash.
- Do not exceed the maximum load! See the programme selection table for the maximum load for the programme you require.

Fibre Type	Maximum Wash Loading Capacity
Cotton	8.0kg
Synthetic	4.0kg
Wool	2.0kg
Delicate	2.5kg

GB


preparing laundry

- Treat stains before washing.
- Some items should be put into a cleaning net before going into the machine, i.e. bras with metal wires, tights and lace clothing to prevent damage.
- Check that pockets do not contain any objects which may damage your clothes and the machine.
- Tie up any loose strings on laundry, close zippers and reverse clothing with zips inside out.
- To prevent any large, heavy objects (e.g., buckles, large buttons, etc.) from hitting the glass door, turn your clothing inside out, or remove the heavy objects. These could damage your laundry or the machine.
- Remove any surplus hair, animal fur, sand, and other materials with a brush before washing.
- If clothes have raised fabric turn them inside out.
- Clothes that are not colour fast should be washed separately.
- Insert your clothes into the machine. Close the machine door. Ensure that you do not trap any items of clothing between the loading door and the rubber seal.
- Do not wash clothes stained with kerosene, alcohol, gasoline and other flammable materials.

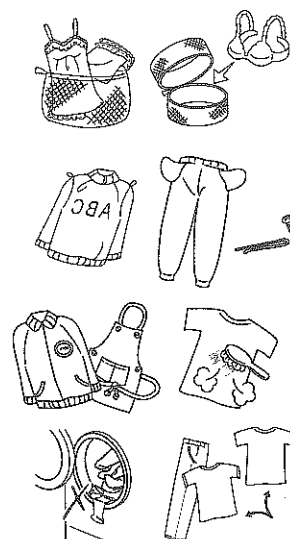

adding detergent and softener

- Add detergent into the appropriate dispenser. If prewash function is selected, put detergent into compartment I. If no prewash function is selected, only put detergent into compartment II. But if your laundry is very dirty, you can select prewash function on top of the wash programme and put detergent into both compartments.

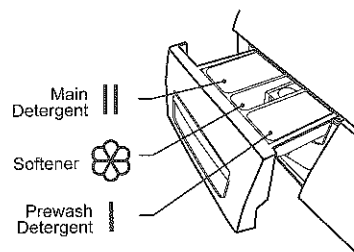

- Apply softener before you start washing.
- Apply detergent and softener according to the washing amount, the soiling level, the water hardness in your area and the manufacturer's instructions of these products.
- Do not use the machine when the detergent drawer is removed. It may cause water leak or it may not work normally.
- To prevent powder detergent staying in the drawer, dry the inside of the drawer with a cloth. Make sure the powder isn't lumpy when you add it into the drawer.
- If the rinse cycle isn't removing all the detergent from your wash, use less detergent.
- Softener and liquid detergent should not exceed the MAX level in the compartment.
- Wash out unused softener with a splash of water or a damp cloth after the programme has finished.
- You can use liquid detergents in all programmes.



Dilute viscous fabric softener and fabric conditioner with water. Prevent blockage of the overflow.

GB

 


before first use

Before washing your clothes for the first time, run a full wash programme first:

1. Connect the machine to the mains power supply and the water supply.
2. Put a small amount of detergent in the detergent drawer. Close the drawer.
3. Press the **On/Off** button.
4. Select a wash programme.
5. Press the **Start / Pause** button.

wash setting

standard washing

1. Pull the door handle and put the laundry in the drum. (Refer to Preparation to sort your laundry before it goes into the drum.) Make sure no washing gets caught in the door.
2. Close the door and press the **On/Off** button. Turn the Programme Selection Dial to select your wash programme.
3. Select the water temperature, spin speed and other functions if desired.
4. Press the **Function** button continuously to select other washing options. Other washing options are:
 - prewash: to perform an extra wash before main wash
 - extra rinse : to perform an extra rinse once
5. Press the **Dry** button continuously to select dry level options: Gentle Dry  (clothes are slightly dried), Normal Dry  (the normal drying procedure) and Extra Dry  (clothes are dried very quickly).



- Clothes could be dried after spinning, if suitable for drying.
- Classify fabrics according to their types and drying level.
- Proper drying time should be set for drying synthetic.
- If you want to iron the clothes after drying, choose Gentle Dry level.
- Clothes not suitable for drying:
 - Particularly delicate items such as synthetic curtains, woolen and silk, clothes with metal inserts, nylon stockings, bulky clothes such as anoraks, bedcovers, quilts, sleeping bags and duvets
 - Clothes padded with foam-rubber or materials similar to foam-rubber
 - Fabrics containing residues of setting lotions or hair sprays, nail solvents or similar solutions

6. Add detergent into the detergent drawer. The quantity of detergent will depend on the amount of laundry, the degree of soiling and the water hardness. Use the amount of detergent suggested on the packaging.
7. Press the **Start/Pause** button to start the washing.
8. The machine will sound when the programme is complete.



If the door is locked and you switched the machine off and then on - or if there's a power cut - it will stay locked for 5 seconds.

removing washing (once programme is finished)



Door remains locked for 1 minute after wash stopped.

- Open the machine door and remove your washing.
- Remove any foreign objects to avoid risk of rusting.
- Leave the door and detergent drawer open so that residual water can evaporate.

delay start the programme


1. Select a wash programme.
2. Press the **Delay** button repeatedly to set the delay hours for the programme to start (0-24 hr).
3. Press the **Start/Pause** button to confirm and commence the delay function.

To cancel the delay function:

- before the programme starts, press the **Delay** button repeatedly until 0 hr
- while the programme is running, press the **On/Off** button to Off.

adding laundry during wash

You can still add laundry into the unit while it is running a programme. Make sure to follow the procedures below in order to avoid being scalded by the hot water in the drum.

1. Press the **Start/Pause** button for 3 seconds.
2. Wait until the  indicator is light up to signify you can add your laundry. For safety, you should still check if the drum has stopped rotating and if the door is unlocked.



The machine may not unlock the door for adding laundry when there is too much water or when the temperature is too high in the drum.

3. Open the door carefully, be alert of the hot water in the drum.
4. Add the laundry carefully into the drum and close the door.
5. Press the **Start/Pause** button to resume the programme.

GB

selecting the programme

Here are the available programmes, additional functions and option settings.

Water temperature can be selected separately for certain programmes.

Programme	Wash/ Dry Load(kg)	Detergent Box			Default Temp.(°C)	Default Time (Min)	Default Speed (rpm)
		Case I	Case II	Softener Case			
Cotton ECO	8.0	X	●	○	30	67	800
Cotton	8.0/6.0	○	●	○	40	160	1400
Mix	8.0/4.0	○	●	○	40	140	1200
Wool	2.0	○	●	○	40	67	400
Delicate	2.5	○	●	○	30	60	600
Duvet	8.0	○	●	○	40	108	800
Rinse & Spin	8.0	X	X	○	-	31	800
Self Clean	-	X	X	X	90	82	400
Spin Only	8.0	X	X	X	-	12	800
Dry Only	-/6.0	X	X	X	-	268	1400
Baby Care	8.0/4.0	○	●	○	60	105	1000
Daily Wash	8.0	○	●	○	40	79	800
1 Hour W/D	1.0/1.0	X	●	○	Cold	60	1400
Rapid 45'	8.0	○	●	○	40	45	800
Express 15'	2.0	X	●	○	Cold	15	800

● Means must ○ Means optional X Means not applicable

The energy class is A

Energy test programme: Cotton ECO 60°C (under the highest speed; others as the default)

Half load for 8.0kg machine: 4.0kg.

"Cotton ECO 60" is the standard washing programme and "Dry Only" is the standard drying programme to which the information in the label and the fiche relates, and they are suitable to clean normally soiled cotton laundry and they are the most efficient programmes in terms of combined energy and water consumption for washing that type of cotton laundry, the actual water temperature may differ from the declared cycle temperature.

Note: The parameters in this table are only for user's reference. It is different from the normal time when using depending on the temperature and the load.



- Programmes with the Dry icon can apply the Dry function.
- Programmes with the Easy Jet icon will have water spraying on the machine window for 10 seconds before each wash cycle.



"1 Hour W/D" programme is suitable for the washing and drying of small and thin synthetic items. For big and thick items (such as big towels and jeans), using this programme may not dry the thick items completely.



- Washing times depend on programme and temperature settings selected.
- Washing times may be longer if the laundry in the drum needs to be balanced. A single clothing or small load may result to the machine detecting it as an unbalanced load. Make sure to add more clothes in the small load or single clothing for the machine to wash and spin properly.

Here are the additional functions and option settings.

GB

	Delay	Extra Rinse	Prewash
Cotton ECO	O	X	X
Cotton	O	O	O
Mix	O	O	O
Wool	O	O	X
Delicate	O	O	X
Duvet	O	O	O
Rinse & Spin	O	X	X
Self Clean	O	X	X
Spin Only	O	X	X
Dry Only	O	X	X
Baby Care	O	O	O
Daily Wash	O	O	O
1 Hour W/D	O	X	X
Rapid 45'	O	O	O
Express 15'	O	X	X

O Means optional

X Means not applicable